


8. Press down the upper loop former. Start projector by turning the Forward /Reverse switch clockwise to Forward position, then insert trimmed film leader into the upper film cover. The film will travel through the projector automatically and the Take-up Auto spool catches the end of Film automatically. Take-up reel will pick up the film by itself. Hold depressed the Loop Former till Take-up reel picks up the film. Turn switch clockwise to lamp and focus your projector.

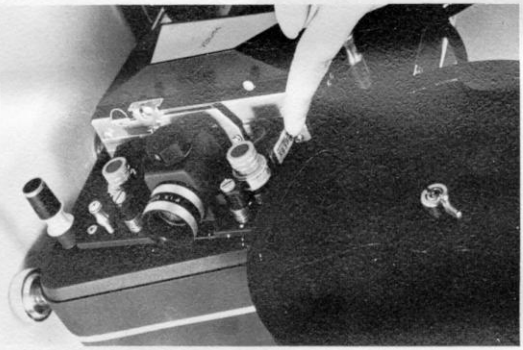


9. Forward Projection — turn the Forward / Reverse switch clockwise through motor only position to motor and lamp setting.


Reverse Projection—rotate switch back to "OFF", then continue anticlockwise through motor only to motor and lamp setting.

10. Variable Speed Control — the projection speed is continually variable between 14 to 22 frames per second by turning control knob clockwise for fast and anticlockwise for slow.

11. f1.4 20–32 mm Zoom lens. Rough focus by rotating complete lens barrel, and use the focusing knob for fine critical focusing. Adjust the size of picture by "zooming" the lens, simply move lens mount in or out.

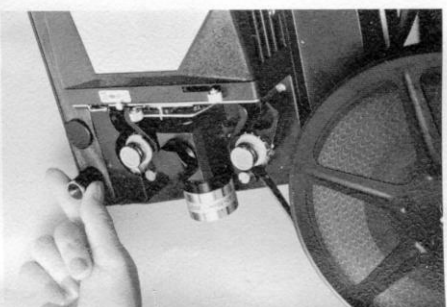

12. Framing. Should a black strip or the edge of the next picture appear at the top or bottom of the screen, adjust framing control until picture is correctly framed.

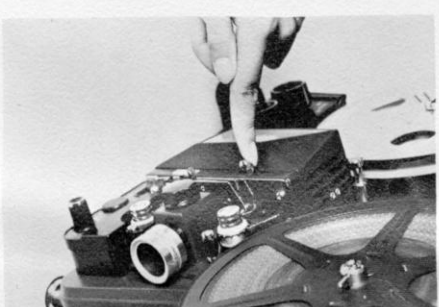

13. Still Projection Lever. Press down lever to stop projector for examination of individual frame. Should whole of picture not be visible, momentarily release and depress again.