



## RAYNOX DU-707A 8 MM PROJECTOR for Standard-8 · Super-8 · Single-8

RAYNOX DU-707A model is designed to Project any of 3 types of 8 mm film STANDARD-8, SUPER-8 and SINGLE-8.

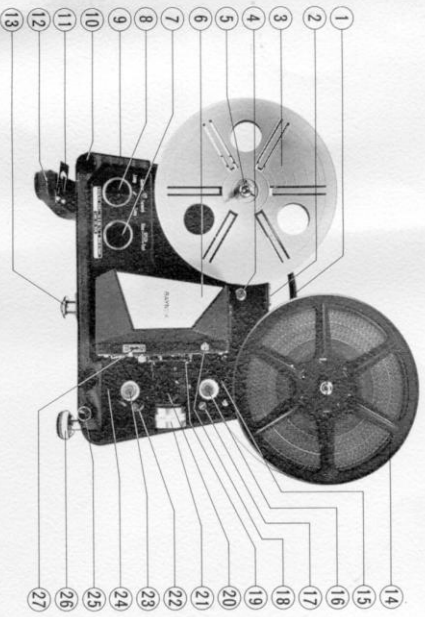

- |                          |                           |                                  |
|--------------------------|---------------------------|----------------------------------|
| 1 Carrying Handle        | 10 Mains Lead Socket      | 19 Film Pressure Plate           |
| 2 Cover Lock             | 11 Film Cutter            | 20 Zoom Lens                     |
| 3 Take-Up Auto Spool     | 12 Stand                  | 21 Focusing Knob                 |
| 4 Rewind Film Guide      | 13 Spool Holder           | 22 Lower Film Cover              |
| 5 Take Up Spool Spindle  | 14 Front Feed Spool       | 23 Lower Sprocket                |
| 6 Lamp House Cover       | 15 Upper Loop Former      | 24 Film Track                    |
| 7 Variable Speed Control | 16 Upper Sprocket         | 25 Framing Control               |
| 8 Forward/Reverse Switch | 17 Upper Film Cover       | 26 Adjustable Foot for Elevation |
| 9 Film Guide Roller      | 18 Still Projection Lever | 27 Aperture Mask Lever           |

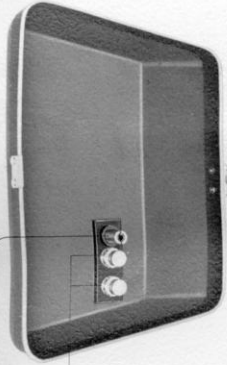

3 Film Guide SPROCKET

## OPERATING INSTRUCTION

1. Remove the take-up spool from the spool holder underneath the projector-a slight twist and it will spring off.
2. Remove the side cover by unfastening the Cover Lock and pressing the Cover slightly downwards.



### 3. STANDARD-8 Film (called DOUBLE-8 or REGULAR-8 Film too) PROJECTION.

- a. See the Upper and Lower sprockets on the projector are RED colored. If not change the sprockets as per instruction in paragraph 5.
- b. Open the Film Pressure Gate, and slide the Aperture Mask Lever to RED 'R' position, and close the Gate.
- c. The Feed Spool Spindle for Standard-8 film is colored with RED.

