

4. SUPER-8 or SINGLE-8 FILM PROJECTION



- a. The both Upper and Lower sprockets must be BLUE closed ones.
 - b. Open the Film Pressure Gate, and slide the Aperture Mask Lever to BLUE "S" position, and close the Gate.
 - c. Put the SUPER-8 Spindle Adapter onto the Feed Spool Spindle.
- When mounting Super-8 Spindle Adapter, please align the two white dots as shown in the picture.



6. HOW TO CHANGE VOLTAGE

Open the Back Cover by unscrewing the holding screws. Pull down the Connector and insert it onto the desired voltage terminal.

CAUTION: DISCONNECT POWER CORD BEFORE YOU OPEN BACK COVER

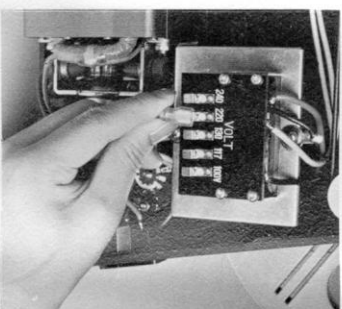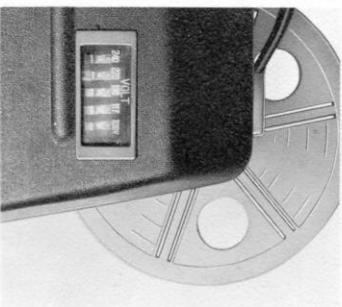

5. HOW TO CHANGE SPROCKET

Open the Film Cover and pull out the Sprocket. Pull out the replacement Sprocket from the holder located inside of PROJECTOR COVER and push into sprocket holder while you open the Film Cover. The Sprocket has two notches to mate with holder.



7. Erect the hinged front feed spool arm and fit the full film spool so that the film comes from the front of the spool with the perforated edge nearest to you. Trim the film leader with the film cutter on the stand.

